Service Information

Mazda Motor Corporation

3-1, Shinchi, Fuchu-cho, Aki-gun Hiroshima 730-8670, Japan TEL: 81(82)287-5323 FAX: 81(82)287-5220




Category S	Technical		Ref. No. E052/12	Page 1 of 3
Coverage ☐ Distributor only ■ Please inform your dealers			Date Issued November 30, 2012	
Please convey this information to your ☐ Director ☐ General Manager ☐ Warranty Dept. ☐ Parts Dept. ☐ Training Dept. ☐ Field Rep.			Date Revised	
Applicable Model		Applicable Countries or Specifications		
Mazda6 (GJ)		Europe		

Subject: Procedure to remove protective cover from A-pillar trim

DESCRIPTION

If the protective cover for the A-pillar trim is forcibly removed, the upper part of A-pillar trim may deform and not get back to the original position.

To avoid this, please make sure to remove the protective cover according to the following procedure.

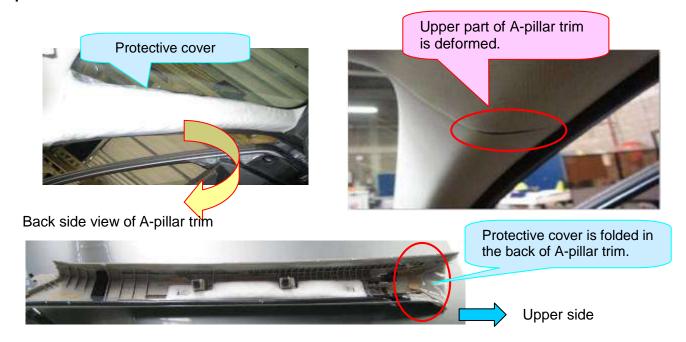

REMOVAL PROCEDURE

1. Hold the protective cover at the bottom of A-pillar trim.



2. To take off gradually pull the protective cover to upward direction.



3. Remove the protective cover up to the corner of the front windscreen.



4. Hold the part of protective cover near the A-pillar trim.



5. Pull the protective cover along the edge line of A-pillar trim (along the arrow in the figure) to take off.



6. Pull the protective cover toward the vehicle rear (to the direction of arrow in the figure) to take it out between the A-pillar trim and top ceiling.



7. Take off the protective cover.



Mitsunori Tokunaga Manager, Technical Information Gr. Technical Service Dept. Mazda Motor Corporation (MC Internal Use)