

1850A -1 \* BATTERY

PART NO.	QTY	MODEL/RESTRICTION	MODEL/RESTRICTION	MODEL/RESTRICTION	FROM-TO
18-520	1	BATTERY	BATTERIE		
AM4S-18-520A	1	75D26L PANASONIC (75D26L)	75D26L PANASONIC		
F220-18-520E	1	50D20L PANASONIC (50D20L) (6-SP)	50D20L PANASONIC (6-VITS)		
F221-18-520E	1	55D23L PANASONIC (55D23L) (4-SP)	55D23L PANASONIC (4-VITS)		
18-522	1	BAND, BATTERY	COLLIER DE SERRAGE		
FE50-18-522	1				
18-59X	1	BOX, BATTERY	BOITE, BATTERIE		
N3H1-18-591D	1				
18-593	1	COVER, BOX-BATTERY	COUVERCLE, BOITE-BATTERIE		
N3H1-18-593C	1				
18-596	1	DUCT, BATTERY	CONDUIT, BATTERIE.		
N3H1-18-596	1				
56-030	1	CLAMP, BATTERY	CORNIERE DE BATTERIE		
H384-56-03XA	1				
56-04X	1	STAY, BATTERY CARRIER	SUPPORT, PORTEUR BATTERIE.		
F151-56-04YB	1				
56-863A	1	TRAY, BATTERY	BAC, SUPPORT BATTERIE		
F151-56-041B	1				
67-011C	2	CLIP	CLIP		
GJ21-28-803	2				
70-985A	2	BOLT, CLAMP	BOULON, CRAMPON		
0259-54-292A	2				

1850A BATTERY

