


Grounds only shown:

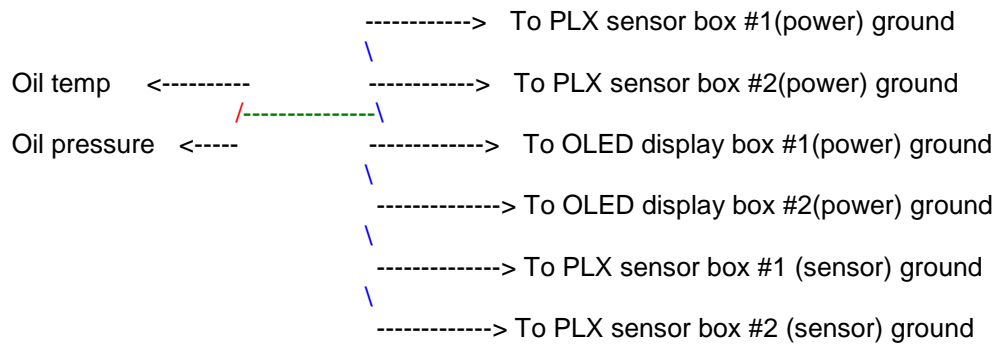

"/" = Ground tie point by master cylinder

"\" = Ground tie point by interior fuse panel

"-----" = Heavier awg wire running through firewall.