



Center Pass Thru







Center Pass Thru







Putting Components in the Pass thru








Remove Bolts from pass thru







Fitting Mobo, Hardrive and PSU on Pass-thru

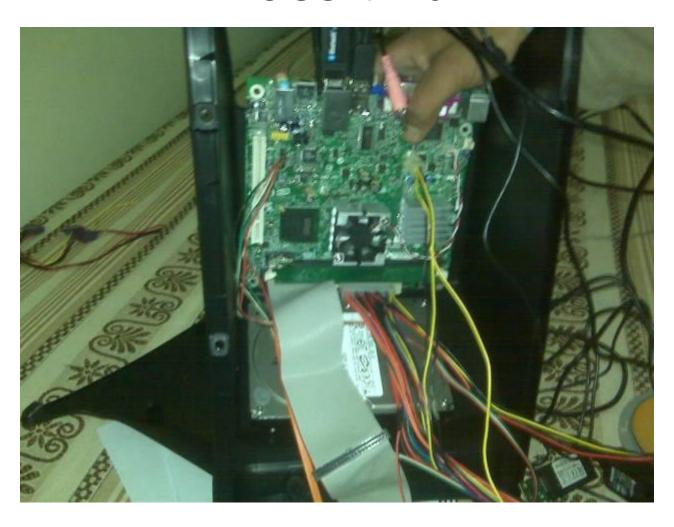





Stock Navigation Rom located under center Pass Thru







Replacing Stock Navi with DVD-Rom and

