

Before Use Activation

Insert the map disc into the unit to start the Mobile Navigation System.




Map Disc

- Only map discs with a NAVTECH DVD-SDAL format that are seamless supported can be used with this unit. Use DVD-SDAL-formatted map discs (SEAMLESS) that NAVTECH has specifically designed for this unit.
- Refer to "Handling and Care of Map Discs" to know how to handle a map disc (page 41).

Notes


- The map disc cannot be inserted or ejected while the ignition switch is in the OFF position.
- Remember that the battery can run down if the ignition switch is kept in the ON or ACC position for a long time while the engine not running.

- 1** Turn the ignition switch to the **ON** position and press **OPEN** to open the display.

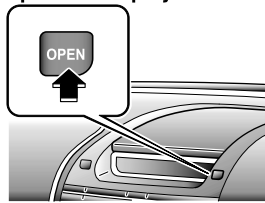

Notes


- The display angle can be adjusted by pressing **TILT**.

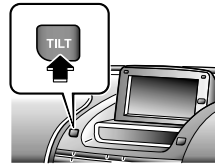

When the **TILT** is pressed, the display angle changes in stages.

- Press **OPEN** to close the display.

 - 2** Slide the front cover down of the unit.




Notes

- The main unit is located in the Center Console(Rear).
- Condensation may form on the optical lens or the map disc inside the unit when the temperature in the vehicle increases in a short time such as when heating the car on a cold day. This condensation may cause malfunctions. If so, then unload the map disc and do not operate the unit for approximately 1 hour. Wipe the condensation off the map disc with a soft cloth. If the unit does not operate correctly over 1 hour, then consult an Authorized Mazda Dealer.

- 3** Insert the map disc with the printed side facing up, and close the front cover by pushing it up.



 Opening screen



[Warning] screen

4 Read



● Curr app

5 Select



Notes

- The following: English (Def)
- You do not f

When the ig press ▲ (E

