


# HEATER AND AIR CONDITIONER(AUTO)

# G-1b

& ...WITH HANDS-FREE TELEPHONE(HF/TEL)SYSTEM  
 @ ...WITHOUT HANDS-FREE TELEPHONE(HF/TEL)SYSTEM

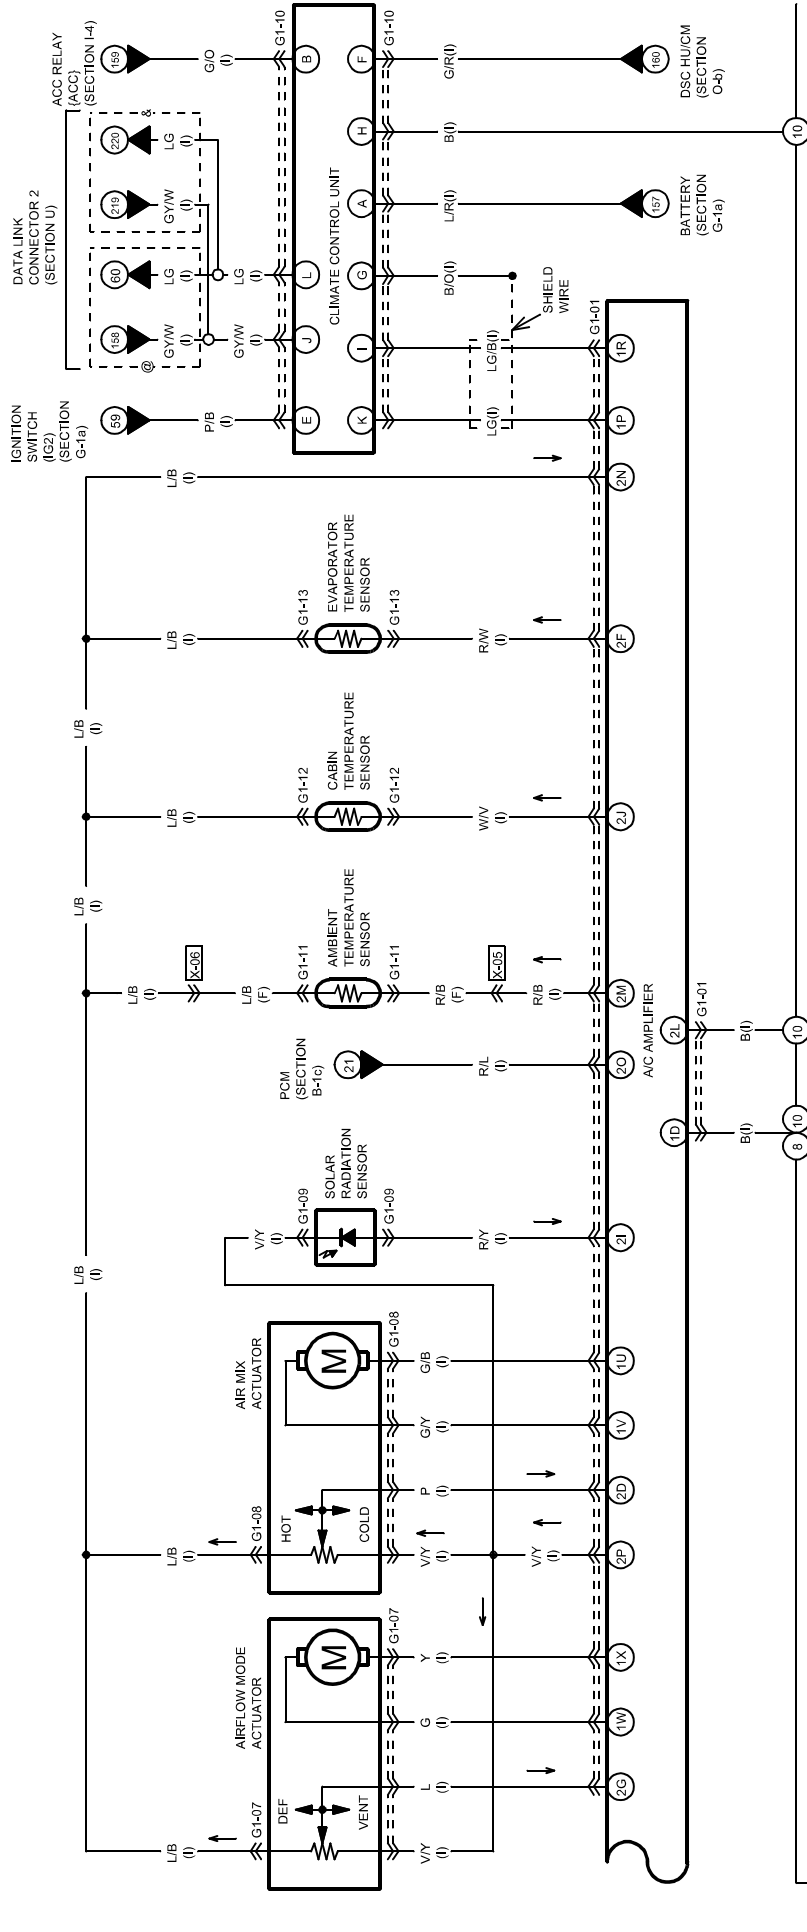

<p>G1-01 A/C AMPLIFIER(I)</p>	<p>G1-07 AIRFLOW MODE ACTUATOR(I)</p>	<p>G1-09 SOLAR RADIATION SENSOR(I)</p>
<p>G1-08 AIR MIX ACTUATOR(I)</p>	<p>G1-10 CLIMATE CONTROL UNIT(I)</p>	<p>G1-12 CABIN TEMPERATURE SENSOR(I)</p>
<p>G1-11 AMBIENT TEMPERATURE SENSOR(F)</p>	<p>G1-13 EVAPORATOR TEMPERATURE SENSOR(I)</p>	<p>G1-13 AMBIENT TEMPERATURE SENSOR(I)</p>

HARNESS SYMBOL: (F) (E) (R)

