




J2-06 MAIN AMPLIFIER (R)

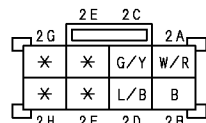

J2-08 CENTER SPEAKER (I)

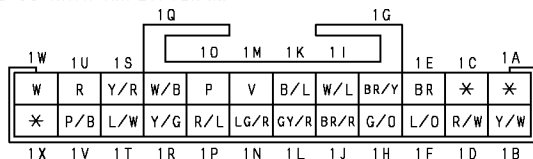

J2-09 FRONT DOOR SPEAKER AMPLIFIER LH (DR1)

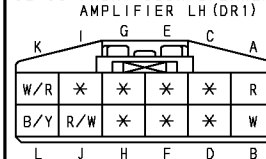


J2-10 FRONT TWEETER LH (DR1)




J2-11 FRONT TWEETER RH (DR2)



J2-12 FRONT DOOR SPEAKER AMPLIFIER RH (DR2)

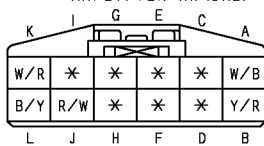


 J2-13 FRONT DOOR SPEAKER LH (FRONT DOOR SPEAKER AMPLIFIER LH)



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.

 J2-14 FRONT DOOR SPEAKER RH (FRONT DOOR SPEAKER AMPLIFIER RH)



TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.