


# FRONT FOG LIGHT

## FRONT FOG LIGHT REMOVAL/INSTALLATION

### LH

1. Disconnect the negative battery cable.
2. Remove the front side marker lights.(See FRONT SIDE MARKER LIGHT REMOVAL/INSTALLATION .)
3. Remove the front bumper.(See FRONT BUMPER REMOVAL/INSTALLATION .)
4. Disconnect the connector.

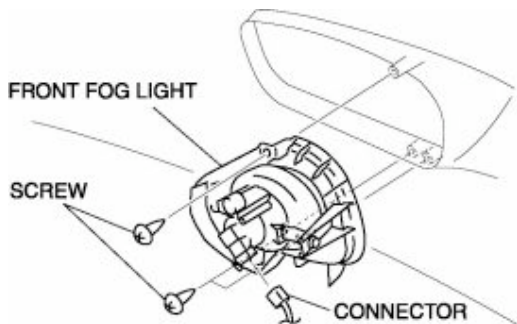


5. Remove the screws, then remove the front fog light.
6. Install in the reverse order of removal.
7. Adjust the front fog light aiming.(See FRONT FOG LIGHT AIMING .)

### RH

1. Disconnect the negative battery cable.

2. Remove the front side marker lights.(See FRONT SIDE MARKER LIGHT REMOVAL/INSTALLATION .)
3. Remove the front bumper.(See FRONT BUMPER REMOVAL/INSTALLATION .)
4. Disconnect the connector.
5. Remove screws A and pull back the front fog light cover in the direction of the arrow.

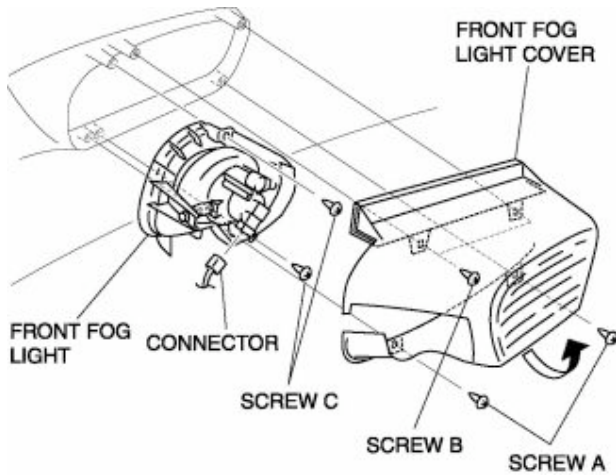


6. Remove screw B, then remove the front fog light cover.
7. Remove screws C, then remove the front fog light.
8. Install in the reverse order of removal.
9. Adjust the front fog light aiming.(See FRONT FOG LIGHT AIMING .)


## FRONT FOG LIGHT AIMING

 1. Adjust the tire pressure to the specification.

2. Position the unloaded vehicle on a flat, level surface.
3. Seat one person in the driver's seat.
4. Position the vehicle straight ahead and perpendicular to a white screen.
5. Set the fog lights **3 m {9.8 ft}** from the white screen.




6. Place an object in front of the fog light not being adjusted to block its light beam.
7. Start the engine so that the battery remains charged.
8. Turn the front fog lights on.
9. Loosen the screw and the adjusting bolt, move the front fog light in the direction of the arrows, and adjust the front fog light beam to the position shown in the figure.
10. Tighten the adjusting bolt, then tighten the screw.

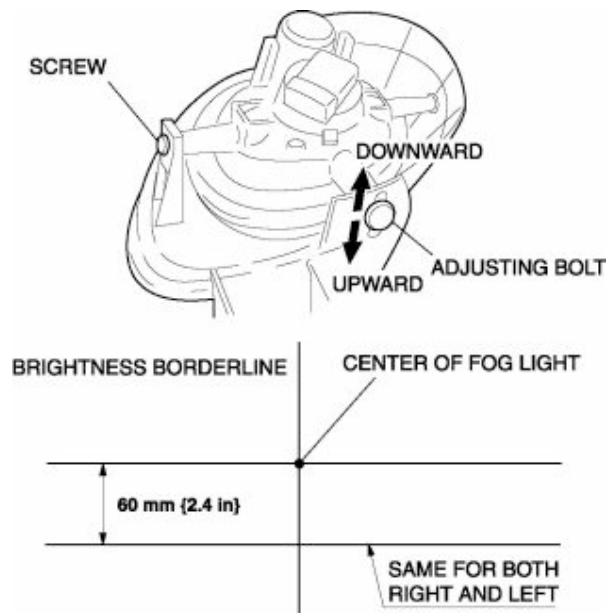

## FRONT FOG LIGHT BULB REMOVAL/INSTALLATION

1. Disconnect the negative battery cable.
2. Slightly bend back the mudguard.
3. Disconnect the connector and remove the front fog light bulb.(See Front Fog Light Bulb Removal Note .)

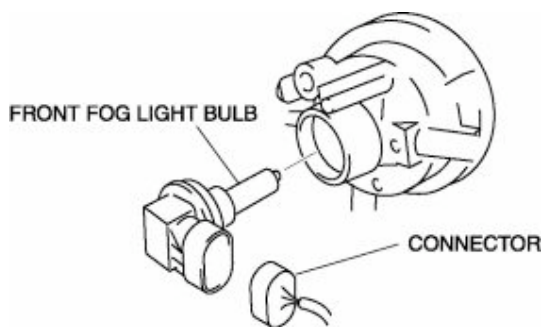

### CAUTION:

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When handling the bulb, hold the flange, not the glass.