



# Setup

## System

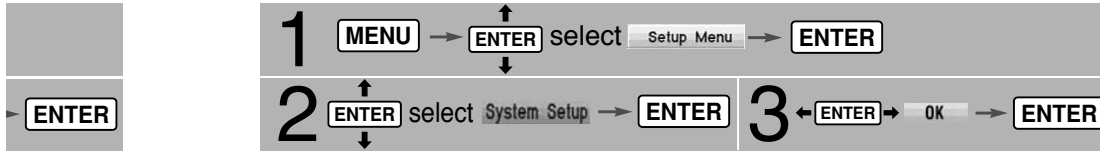


**System Setup** : Default

### Open the [System Setup] screen

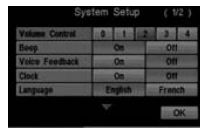

**ENTER**

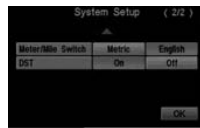

### ■ Volume control for voice guidance (5 levels)

Volume Control 0 1 2 3 4

Adjust the volume control at the monitor as well.

### ■ Beep

Beep On Off

- On : Beep activated when pressing buttons in the remote control.
- Off : Beep inactivated when pressing buttons in the remote control.

### ■ Voice repetition

Voice Feedback On Off

- On : Initiates vocal guidance.
- Off : Initiates no vocal guidance.

### ■ Clock

Clock On Off

### ■ Language

Language English French

### ■ Changeover meter/mile

Meter/Mile Switch Metric English

- Metric : Meters
- English : Miles

### ■ Daylight Saving Time(Summer Time)

DST On Off

- On : Daylight saving time mode is enabled.  
(The navigation internal clock gains 1 hour).
- Off : Daylight saving time mode is disabled.

### ■ How to exit

**OK** → **ENTER**

to back  
on it.

atically  
proaching

it

ute

ition.

32

User setting

33