

Mazda M-TIPS • May/June • 2005

## All Models

## Installing Wheel Locks

Wheel locks should be installed by hand and torqued to the appropriate specification given in the Workshop manual. Use of an air or electric impact wrench may cause permanent damage to the lock and key.

Warranty claims will not be reimbursed for damage of this nature.



DO NOT Use Impact To Install Wheel Locks



Use Torque Wrench To Install Wheel Locks