

MULTIPLE MODELS IPOD® ADAPTER APPLICATION TABLE

When an accessory iPod® adapter is used with an unsupported iPod, some functions (e.g. control audio volume) of the iPod® do not work. The iPod® application table lists supported and unsupported iPods by adapter.

When you encounter a customer complaint that the iPod® doesn't work correctly, check if the customer's iPod® is listed as compatible with the iPod® adapter. If not listed or if the iPod® has a dash "-" in the table, inform the customer that their iPod® is not supported and some functions will not work as stated above.



iPod® Shuffle (2G)



iPod® Nano (2G)



iPod® Classic



iPod® Nano (3G)



iPod® Mini (2G)

TYPE/Generation		iPod® Adapter / Software Version	
		F197-79CFZ TD91-79CFZ	C9F2-V6572
iPod®			
	1	-	-
	2	-	-
	3	2.3 or Higher	2.3 or Higher
	4	1.2.1 or Higher	1.1 or Higher
	5	1.2.3 or Higher	1.1 or Higher
	5.5	1.2.3 or Higher	1.1 or Higher
iPod® Photo			
	1	1.2.1 or Higher	1.1 or Higher
iPod® Classic			
	1	1.1 or Higher	1.1 or Higher
iPod® Touch			
	1	-	-
	2	-	-
iPod® Mini			
	1	1.4.1 or Higher	1.2 or Higher
	2	1.4.1 or Higher	1.2 or Higher
iPod® Nano			
	1	1.3.1 or Higher	1.1 or Higher
	2	1.1.3 or Higher	1.1.1 or Higher
	3	1.1 or Higher	1.0.3 or Higher
	4	-	-
iPod® Shuffle			
	1	-	-
	2	-	-
iPhone			
	1	-	-
iPhone 3G			
	2	-	-