



# M-TIPS



## ***2004 RX-8 (with Navi System)***

### ***Navigation System Self-Check***

The Navigation system has an on-board electrical system self-check feature. Accessing this information may be useful when troubleshooting system faults. It includes antenna, wire continuity checks, speed sensor signals, accessory voltage & GPS information (Signal quality LAT/LONG). To access the system tests, follow the steps below:

1. Turn ignition switch to ON position and access NAVI menu.
2. Select “SET-UP” screen from NAVI main menu.
3. Select “SYSTEM INFORMATION”
4. Select “VERSION”
5. Push joystick switch forward 2 times (quickly), immediately followed by pulling joystick switch backward 2 times (quickly).
6. Information regarding wire continuity and various inputs can then be checked.