

2004 RX-8

Room Fuse/Battery Note

When installing the 15 amp room fuse, or when battery power is restored, remember to turn the ignition switch to ACC position for 5 seconds before turning the ignition switch to ON or Start position. This sets the system voltage for the PCM & Navigation controllers. **Note:** Vehicles equipped with Navigation may experience operating problems if this procedure is not performed for the first time after installing the room fuse or restoring battery power.

Mazda M-TIPS • March/April • 2004