



M-TIPS




2004 RX-8

Spark Plug Removal Tip

Master Technician, Mark Malinowski of Nucar Mazda in New Castle, Delaware found an easy way to remove spark plugs on RX-8 models.

1. Safely lift vehicle on hoist.
2. Remove left front wheel.
3. Remove two (2) fasteners from small splash shield.
4. Remove spark plugs using a long extension and swivel socket.

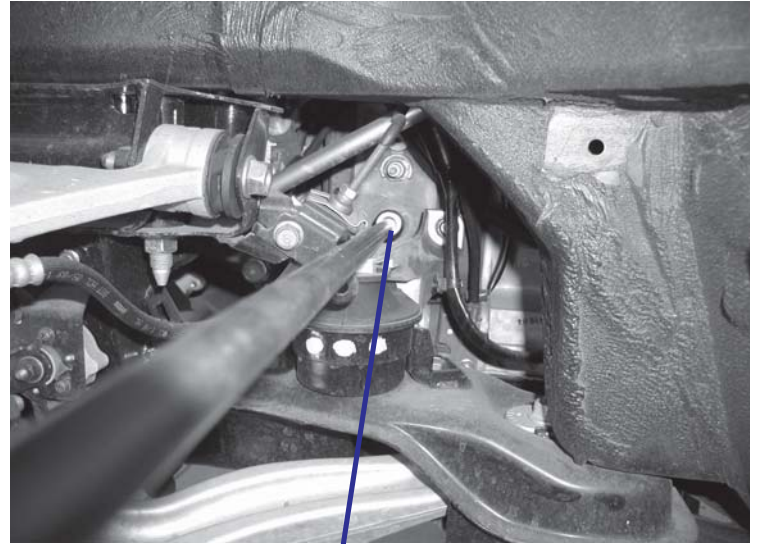

Remove Spark Plugs
Through Wheel Well