



<p>B2-01 FUEL PUMP RELAY (LOW PRESSURE) (CIRCUIT) (F)</p> <p>FRONT</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>	<p>B2-02 FUEL PUMP RESISTOR (F)</p>	<p>B2-03 FUEL PUMP SPEED CONTROL RELAY (HIGH PRESSURE) (FUEL) (F)</p> <p>FRONT</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>	<p>B2-05 REAR (R) - FUEL PUMP UNIT</p> <p>(R)</p> <p>(FUEL PUMP UNIT)</p> <table border="1"> <tr><td>1</td><td>2</td></tr> <tr><td>3</td><td>4</td></tr> </table> <p>TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>	1	2	3	4	<p>B2-06 REAR (R) - FUEL SUCTION PIPE BRACKET</p> <p>(R)</p> <p>(FUEL SUCTION PIPE BRACKET)</p> <table border="1"> <tr><td>2</td><td>1</td></tr> <tr><td>*</td><td>*</td></tr> </table> <p>TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>	2	1	*	*
1	2											
3	4											
2	1											
*	*											
<p>B2-04 CONDENSER (R)</p>	<p>B2-07 FUEL GAUGE SENDER UNIT (MAIN) (FUEL PUMP UNIT)</p> <p>TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>	<p>B2-08 FUEL GAUGE SENDER UNIT (SUB) (FUEL SUCTION PIPE BRACKET)</p> <p>TERMINALS OF THIS CONNECTOR ARE INDICATED BY NUMBERS.</p> <p>NOTE: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.</p>										