
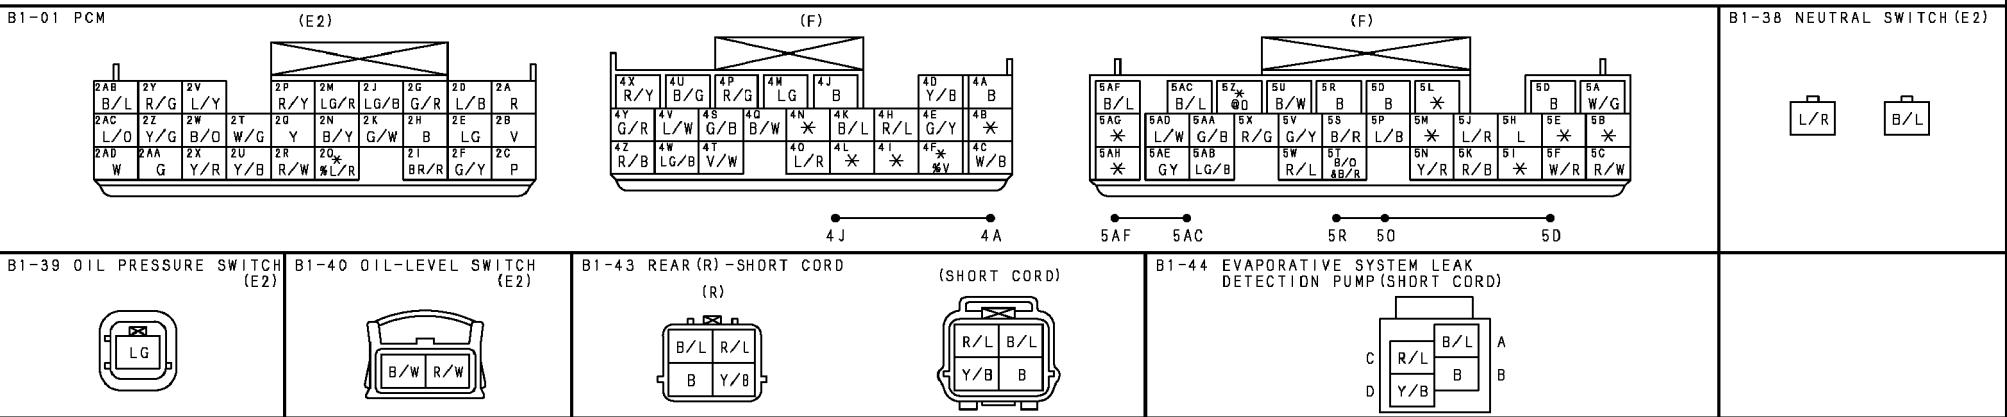


% ... MT
 & ... MT WITH DSC
 @ ... 13B-MSP (HIGH POWER)

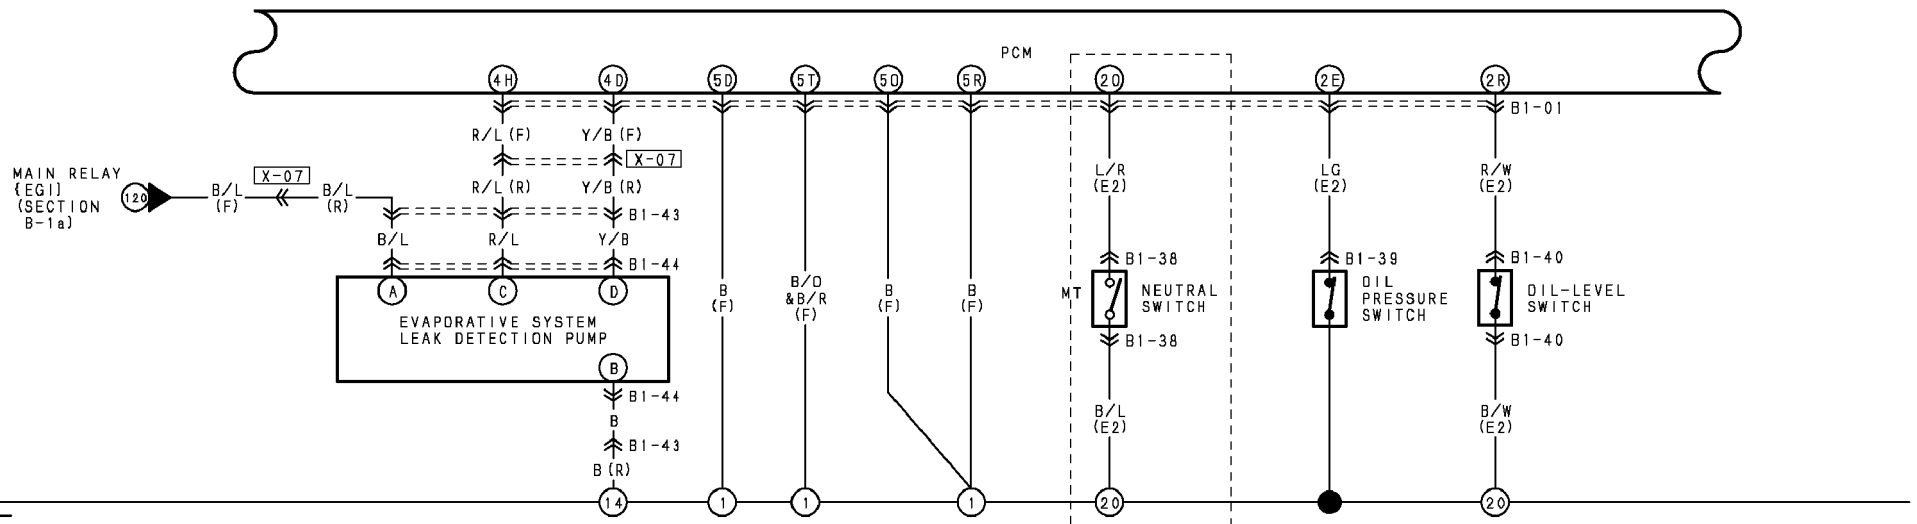

HARNESS SYMBOL:  (F)  (E)  (R)

PCM
Uses information from various sensors/actuators to control powertrain (engine/transaxle) operation.

NEUTRAL SWITCH
Opened when gear is in neutral position. Sends signal to PCM.

[GRAY]
(F)-(R)
X-07

PCM
B1-01

NEUTRAL SWITCH
B1-38

B1-39
OIL PRESSURE SWITCH

OIL PRESSURE SWITCH
Closes when oil pressure is low.

B1-40
OIL-LEVEL SWITCH
[BLACK]

EVAPORATIVE SYSTEM LEAK DETECTION PUMP
The internal pump pressurizes the emission system by pumping air to check clogging and leakage in the emission system.

B1-44
EVAPORATIVE SYSTEM
LEAK DETECTION
PUMP

B1-43
(R)-SHORT CORD
[GRAY]