

Maintenance and Care

Scheduled Maintenance

▼ **Schedule 1**

I : Inspect and repair, clean, adjust, or replace if necessary.
 R : Replace
 L : Lubricate
 C : Clean

Maintenance Interval (Number of months or kilometers (miles), whichever comes first)	Months	6	12	18	24	30	36	42	48
	×1000 km	12	24	36	48	60	72	84	96
×1000 miles	7.5	15	22.5	30	37.5	45	52.5	60	

ENGINE

Engine oil	R	R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Drive belt				I					I

AIR CLEANER

Air filter		C		C	R		C		
------------	--	---	--	---	---	--	---	--	--

IGNITION SYSTEM

Spark plugs									
-------------	--	--	--	--	--	--	--	--	--

FUEL SYSTEM

Fuel filter	Replace every 160,000km (100,000miles)								
Fuel lines, hoses and connections*1				I					I

COOLING SYSTEM

Cooling system				I					I
Engine coolant	Replace at first 96,000km (60,000miles) or 48 months; after that, every 24 months								

CHASSIS & BODY

Brake line, hoses and connection				I					I
Disk brakes		I		I		I			I
Steering operation and linkages				I					I
Front and rear suspension and ball joints				I					I
Manual transmission oil									R
Rear differential oil									R
Driveshaft dust boots				I					I
Bolts and nut on seats				I					I
Exhaust system heat shields				I					I
All locks and hinges	L	L	L	L	L	L	L	L	L
Flat tire repair kit*2	Inspect every year								

AIR CONDITIONER SYSTEM

Cabin air filter (If installed)	Replace every 40,000km (25,000miles) or 24 months								
---------------------------------	---	--	--	--	--	--	--	--	--

*1 According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.

*2 Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.