 


HEADLIGHT

HEADLIGHT AIMING

1. Adjust the tire pressure to the specification.
2. Position the unloaded vehicle on a flat, level surface.
3. Seat one person in the driver's seat.
4. Position the vehicle straight ahead and perpendicular to the white screen.
5. Set the headlights **3 m {9.8 ft}** from the white screen.




6. Place an object in front of the headlight not being adjusted to block its light beam.
7. Start the engine so that the battery remains charged.
8. Turn on the low-beam headlight.
9. Set the headlight leveling switch to the 0 position.(Vehicles with discharge headlights)
10. Adjust the headlight by loosening the adjusting screws as shown in the figure.

NOTE:

- If the adjusting screws are tightened first, then loosened, they will continue to loosen when the vehicle is in motion and may cause the headlights to become misaligned. Always turn the screws in the tightening direction.

11. Turn the adjusting screws to adjust the headlight so that the elbow point is in the shaded area shown in the figure.

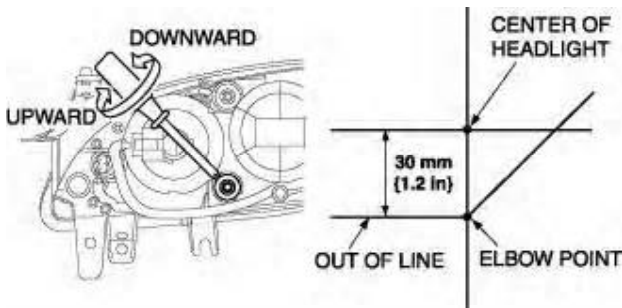


HEADLIGHT BULB REMOVAL/INSTALLATION

Low-beam

Halogen type

1. Disconnect the negative battery cable.
2. Remove the fasteners, then slightly bend back the mudguard.
3. Disconnect the connector.

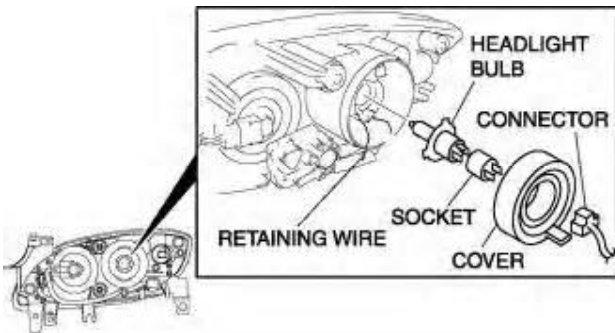

CAUTION:

- A halogen bulb generates extremely high heat when it is illuminated. If the surface of the bulb is soiled, excessive heat will build up and the life of the bulb will be shortened. When replacing the bulb, hold the metal flange, not the glass.