




Workshop Manual

- ⊕ GENERAL INFORMATION
- ⊕ ENGINE
- ⊕ SUSPENSION
- ⊕ DRIVELINE/AXLE
- ⊕ BRAKES
- ⊕ TRANSMISSION/TRANSAXLE
- ⊕ STEERING
- ⊕ HEATER, VENTILATION & AIR COND.
- ⊕ RESTRAINTS
- ⊕ BODY & ACCESSORIES

REAR DOOR ASSEMBLY/DISASSEMBLY

BHE091158010W04

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

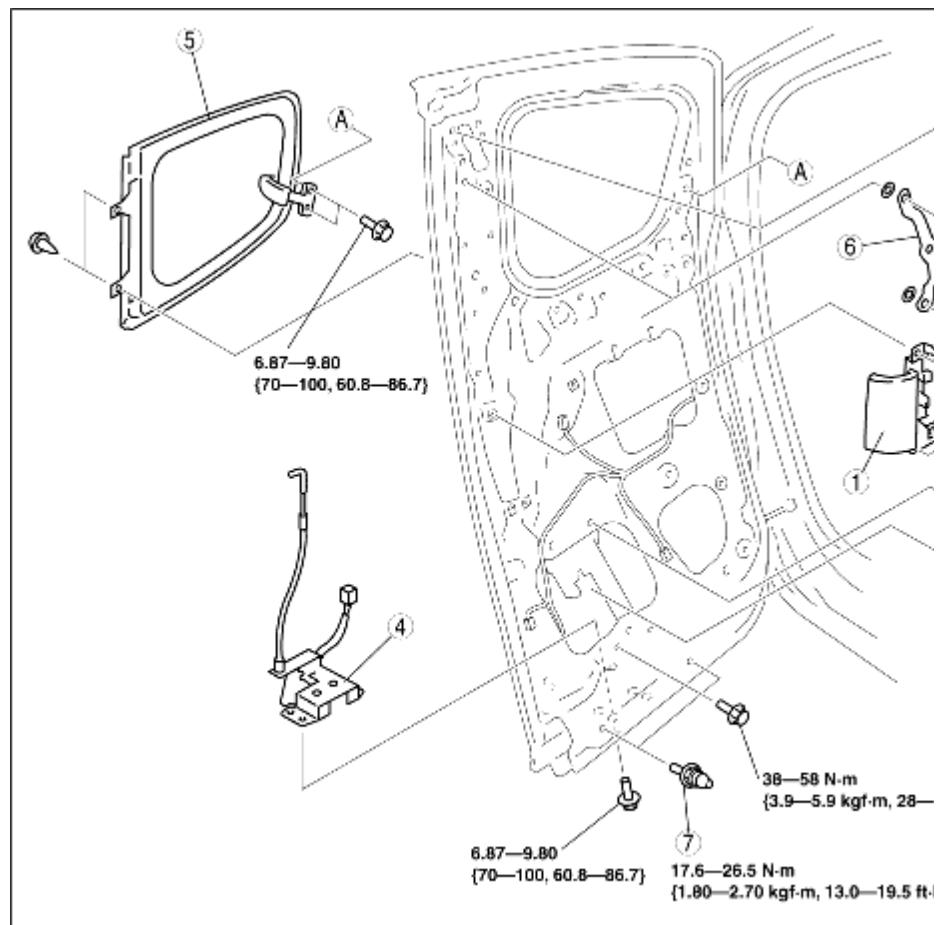

1	Rear door release handle
2	Rear door upper latch
3	Front seat belt retractor
4	Rear door lower latch
5	Rear door glass
6	Bracket
7	Catch pin