


REAR AUTO LEVELING SENSOR REMOVAL/INSTALLATION

BHE091851031W02

1. Disconnect the negative battery cable.
2. Jack up the vehicle and remove the wheel and tire.
3. Disconnect the connector.

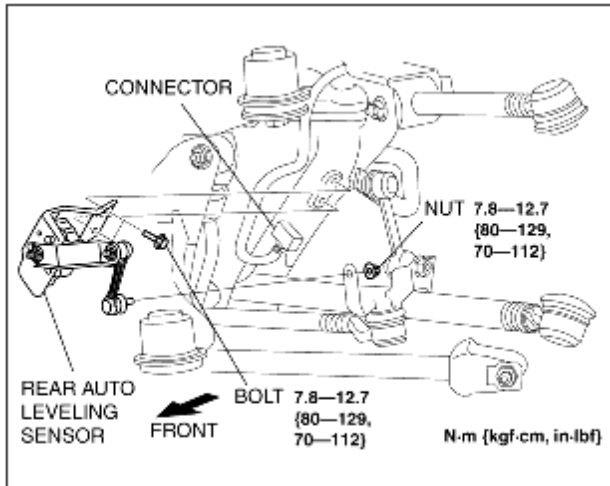

CHU0918W174

4. Remove the bolts and nut, then remove the rear auto leveling sensor.
5. Install in the reverse order of removal.