


HEADLIGHT LEVELING ACTUATOR REMOVAL/INSTALLATION

BHE091851210W01


1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

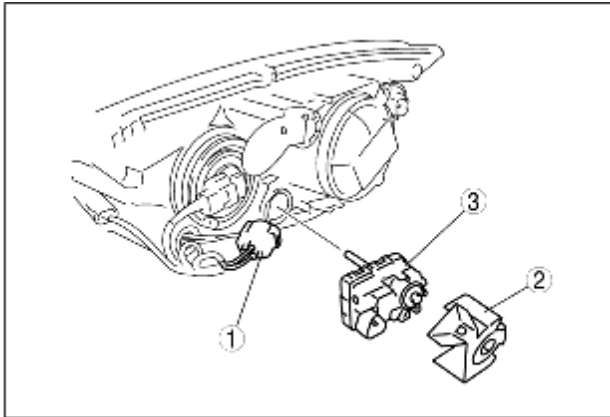

1	Connector
2	Cover
3	Headlight leveling actuator (See Headlight Leveling Actuator Removal Note)

Headlight Leveling Actuator Removal Note

1. Loosen the adjusting bolt until the headlight leveling actuator can be rotated.
2. Rotate the headlight leveling actuator to the position shown in the figure.

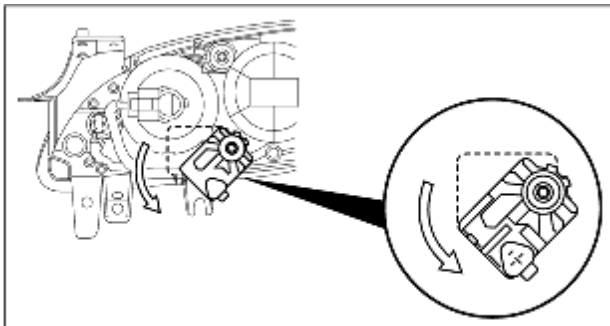

3. Loosen the adjusting bolt further and remove the headlight leveling actuator.

C3U0918W999

BH U0918W000