


HEADLIGHT LEVELING SWITCH REMOVAL/INSTALLATION

BHE0918666F0W01

1. Disconnect the negative battery cable.
2. Remove the headlight leveling switch. (See [Headlight Leveling Switch Removal Note](#).)
3. Disconnect the connector.

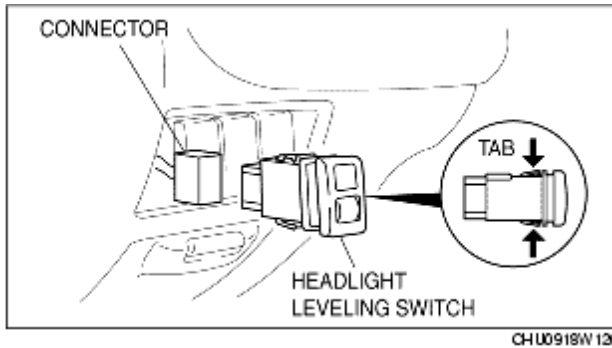

4. Install in the reverse order of removal.

Headlight Leveling Switch Removal Note

1. Reach into the dashboard through the underside of the lower panel and, while pushing on the tabs of the headlight leveling switch, pull it outward.