

Service Information

Mazda Motor Corporation

3-1, Shinchi, Fuchu-cho, Aki-gun
Hiroshima 730-8670, Japan
TEL : 81(82)287-5323
FAX : 81(82)287-5220




Category S	Technical	Ref. No. E006/06	Page 1 of 2
Coverage <input type="checkbox"/> Distributor only <input checked="" type="checkbox"/> Please inform your dealers		Date Issued March 13, 2006	
Please convey this information to your <input type="checkbox"/> Director <input checked="" type="checkbox"/> General Manager <input checked="" type="checkbox"/> Warranty Dept. <input checked="" type="checkbox"/> Parts Dept. <input checked="" type="checkbox"/> Training Dept. <input checked="" type="checkbox"/> Field Rep.		Date Revised	
Applicable Model RX-8 (FE / SE)		Applicable Countries or Specifications Worldwide	

Subject: Shift Panel Removal – Service Tip

DESCRIPTION

When removing the shift panel, special attention is required in order to release the lock(s). If the lock(s) are broken, the shift panel is lifted, causing a poor appearance concern.

This Technical Information is to provide you with the removal points for the shift panel.

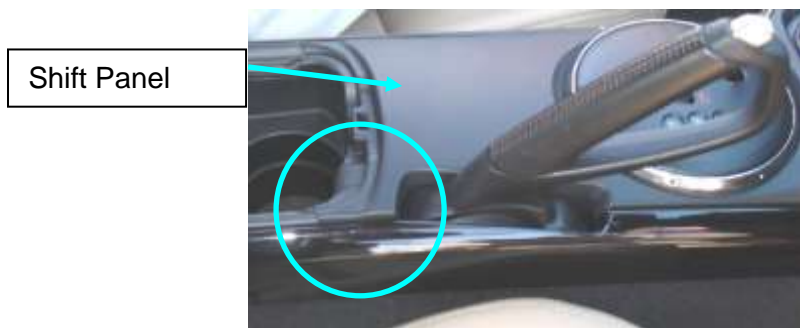

SHIFT PANEL REMOVAL POINTS

 
1. Remove the shift knob.
2. Release the cover of the rear-side of the shift panel.

Cover



3. Insert a plastic spatula (or equivalent tool) under the removed location. Release the locks and remove the whole shift panel.

Note: If you use a flat screwdriver, be sure to wrap cloth or adhesive tape around the tip of the screwdriver so that the panel will not get damaged.



K. Tsuji

Koji Tsuji
Manager, Technical Information Gr.
Technical Service Dept.
Mazda Motor Corp.