




**0810-101 SAS
CONTROL MODULE
(R) [YELLOW]**

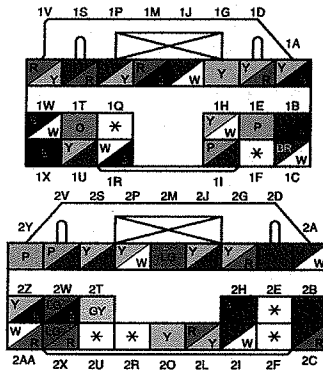



**0810-109 CRASH
ZONE SENSOR (F)
[GRAY]**

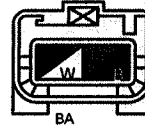

**0914-105 REAR(R)-
SHORT CORD**

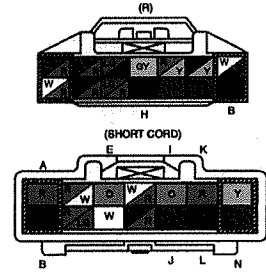

**0914-106 FRONT BUCKLE
SWITCH RH (R)**

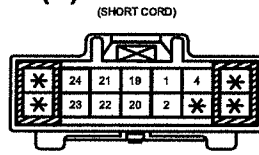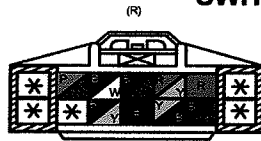

TERMINALS OF THIS CONNECTOR
ARE INDICATED BY NUMBERS.

**0914-112 FRONT
BUCKLE SWITCH LH
(SHORT CORD)**



 
**0810-116 DRIVER-SIDE
CURTAIN AIR BAG MODULE
(R) [YELLOW]**



**0810-118 PASSENGER-SIDE
CURTAIN AIR BAG MODULE (R)
[YELLOW]**




**0810-124 SEAT TRACK
POSITION SENSOR
(SHORT CORD)**



Air Bag System

Follow Workshop Manual Service Warnings and Service Cautions when servicing Air Bag System.

	Front Harness
	Engine Harness
	Rear Harness
	Dash Harness
	Seat
	Interior Light Harness (IN1 & IN2)
	Door Harness (DR1 & DR2)
	Power Sliding Doors (DR3 & DR4)

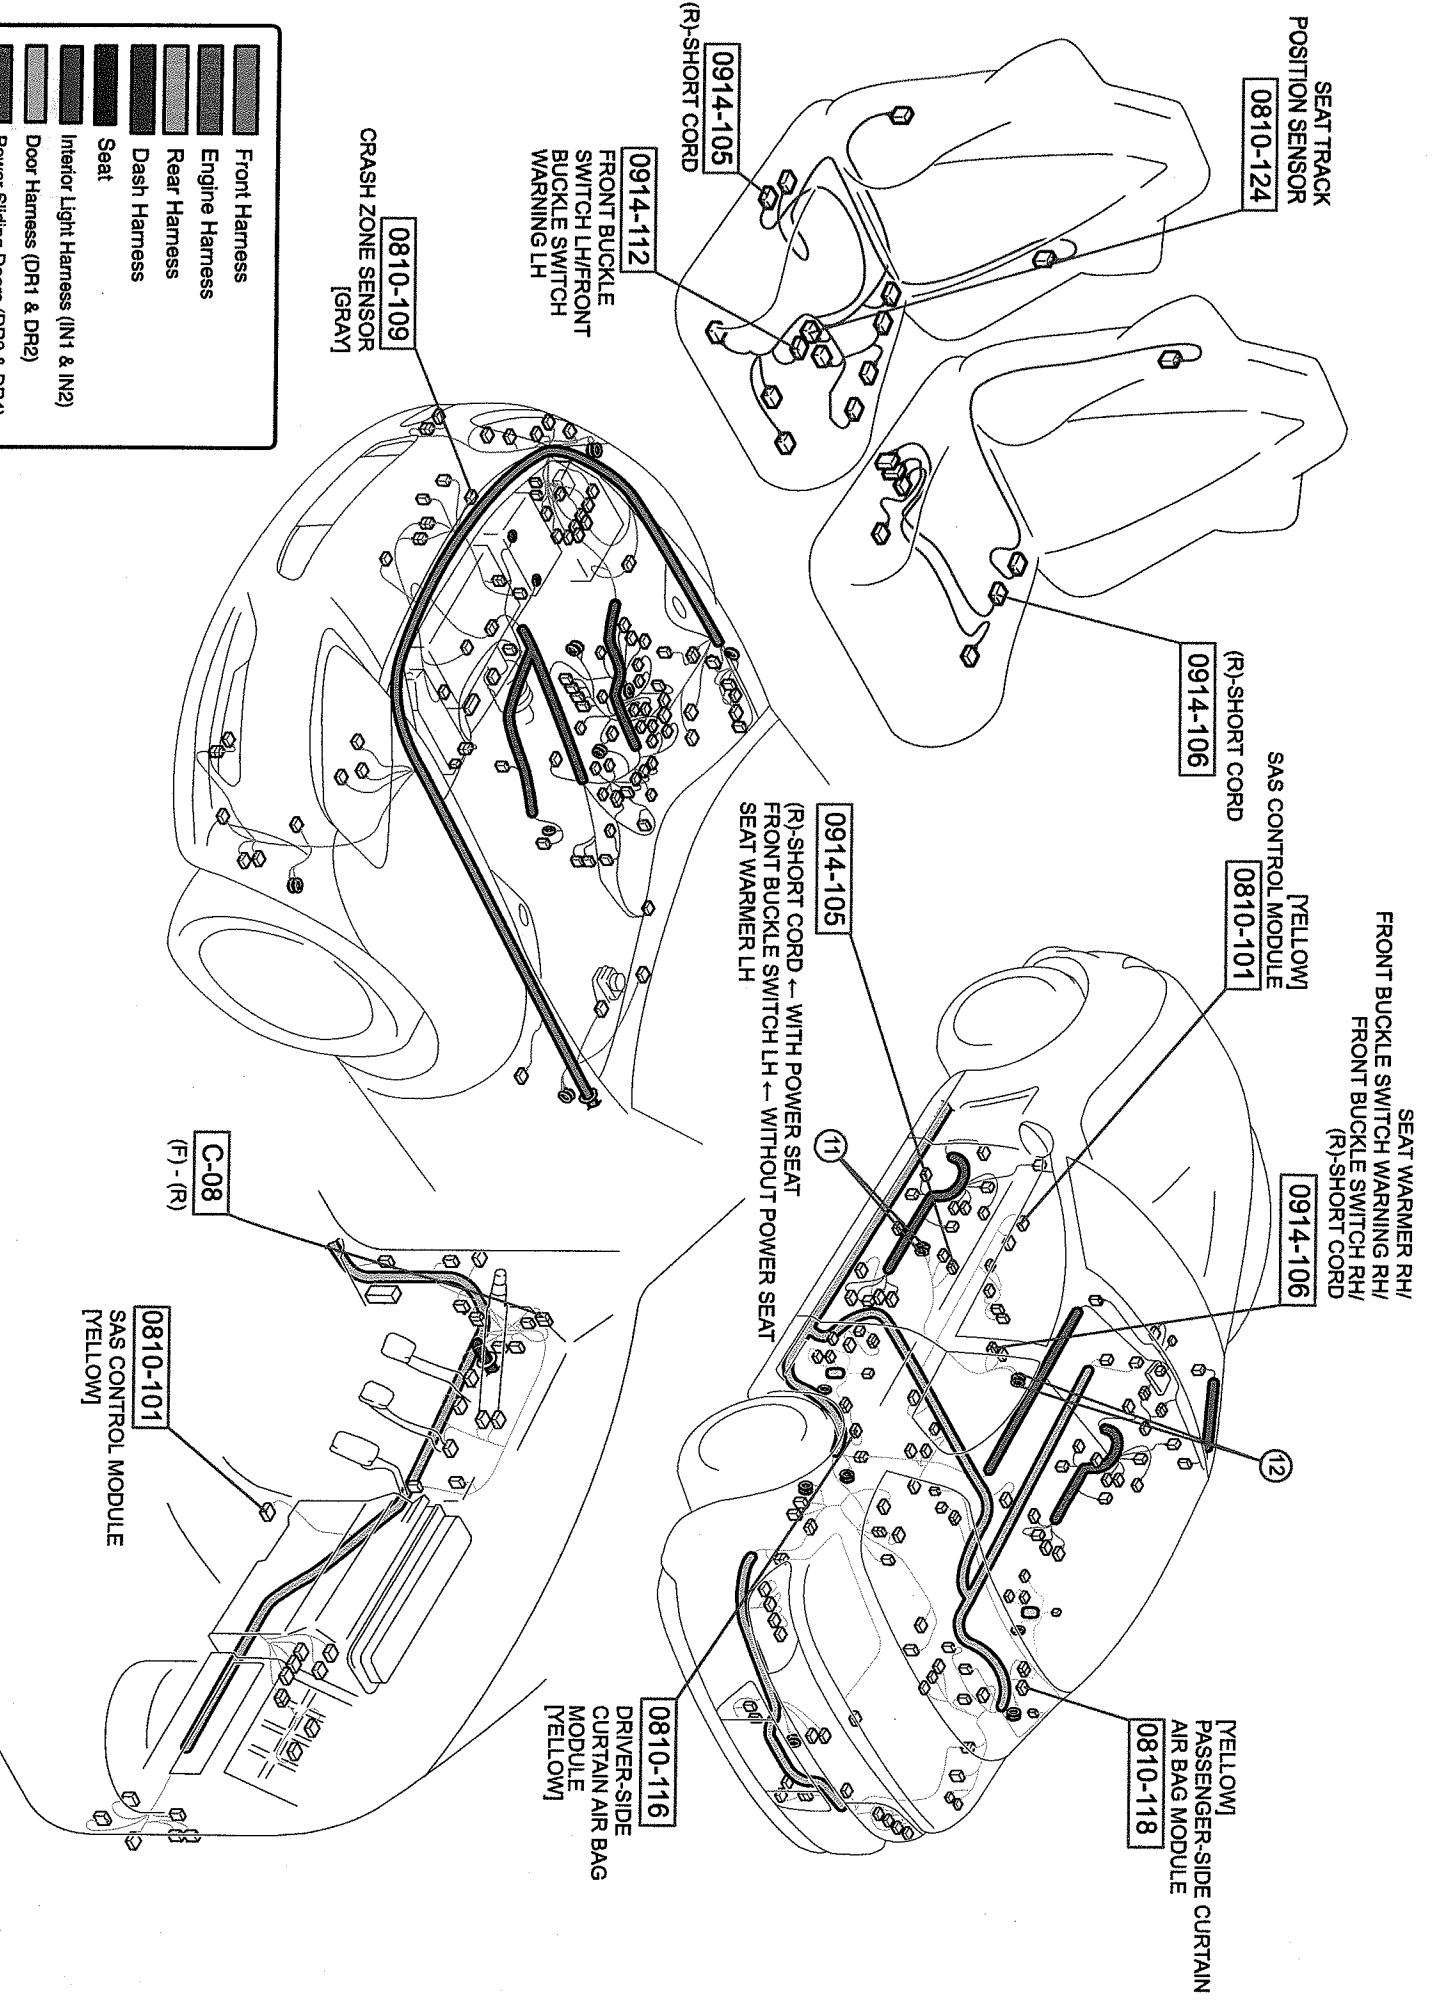

SEAT TRACK
POSITION SENSOR
0810-124

0914-105
(R)-SHORT CORD

0914-112
FRONT BUCKLE
SWITCH LH/FRONT
BUCKLE SWITCH
WARNING LH

0810-109
CRASH ZONE SENSOR
[GRAY]

(R)-SHORT CORD
0914-106
SAS CONTROL MODULE
0810-101
[YELLOW]

0914-105
(R)-SHORT CORD ← WITH POWER SEAT
FRONT BUCKLE SWITCH LH ← WITHOUT POWER SEAT
SEAT WARMER LH

SEAT WARMER RH/
FRONT BUCKLE SWITCH WARNING RH/
FRONT BUCKLE SWITCH RH/
(R)-SHORT CORD

0914-106

C-08
(F) - (R)

0810-101
SAS CONTROL MODULE
[YELLOW]

0810-116
DRIVER-SIDE
CURTAIN AIR BAG
MODULE
[YELLOW]

(YELLOW)
PASSENGER-SIDE CURTAIN
AIR BAG MODULE
0810-118

