


Category F	Technical	Ref. No. E030/05	Page 1 of 2
Coverage <input type="checkbox"/> Distributor only <input checked="" type="checkbox"/> Please inform your dealers		Date Issued November 2, 2005	
Please convey this information to your <input type="checkbox"/> Director <input checked="" type="checkbox"/> General Manager <input checked="" type="checkbox"/> Warranty Dept. <input checked="" type="checkbox"/> Parts Dept. <input checked="" type="checkbox"/> Training Dept. <input checked="" type="checkbox"/> Field Rep.		Date Revised	
Applicable Models RX-8 (FE / SE)		Applicable Countries or Specifications Worldwide	

Subject: Removal / Installation Cautions for Fuel Distributor Insulator

DESCRIPTION


When performing a repair on the fuel distributor insulator and/or fuel distributor, foreign substances may stick to the installation surface of fuel distributor insulator. If the bolts are tightened with the foreign substances on the installation surface, cracks may appear on the insulator, resulting in a whistling noise and/or poor acceleration concern.

The following are cautions for removal & installation of the fuel distributor and fuel distributor. Please be sure to follow them.

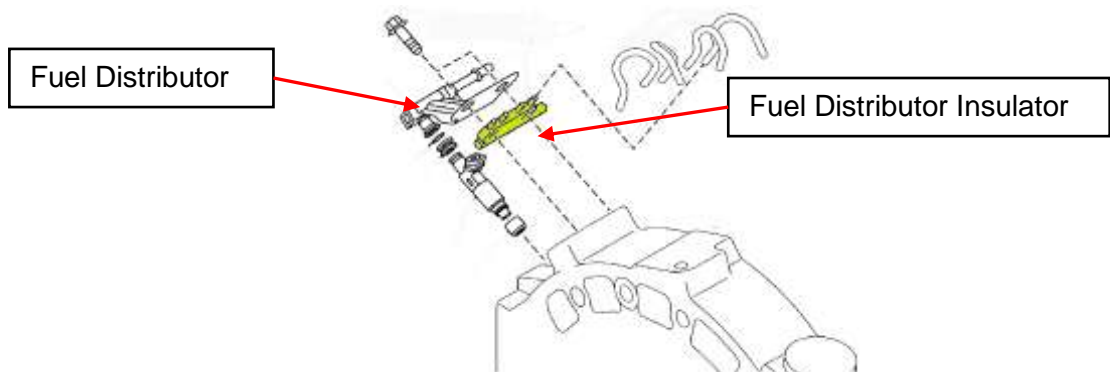


CAUTIONS FOR SERVICE

1. Prior to installing the fuel distributor insulator in the intermediate housing, be sure to clean the installation surfaces.

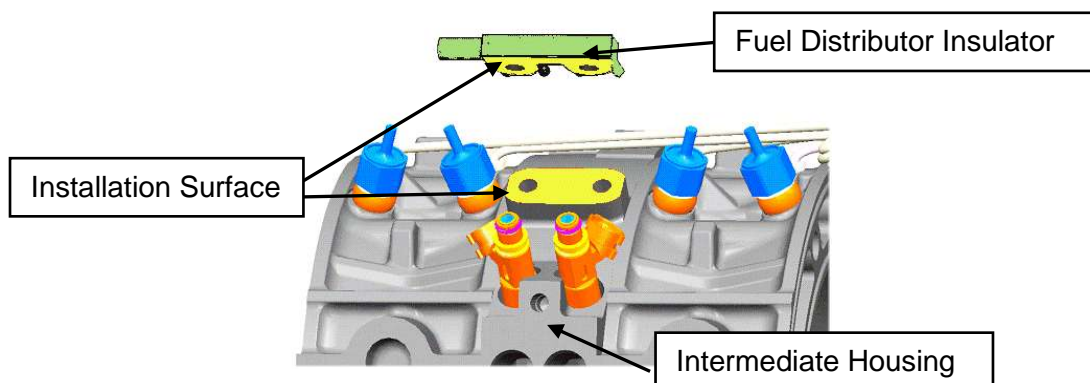

- Also, prior to installing the fuel distributor on the fuel distributor insulator, be sure to clean the installation surfaces prior to tightening the bolts.

Tightening Torque: 18.6-25.5N.m

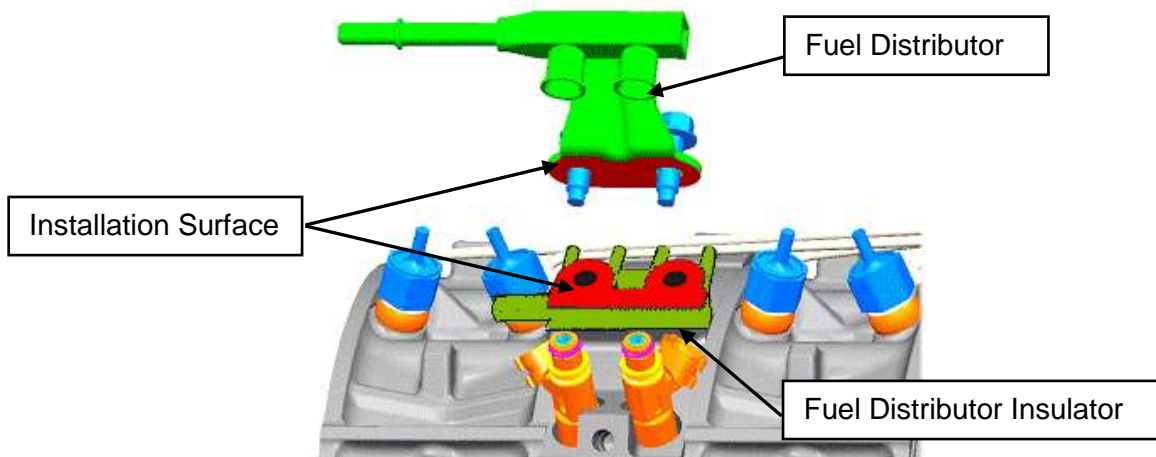

K. Tsuji

Koji Tsuji
Manager, Technical Information Gr.
Technical Service Dept.
Mazda Motor Corp.