


## HOOD ADJUSTMENT

### Gap Adjustment

1. Disconnect the negative battery cable.
2. Remove the following parts:
  - a. Front side marker lights (See FRONT SIDE MARKER LIGHT REMOVAL/INSTALLATION .)
  - b. Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION .)
  - c. Front combination lights (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION .)
  - d. Front fender panel (See FRONT FENDER PANEL REMOVAL/INSTALLATION .)
3. Loosen the hood hinge installation bolts and adjust the hood.

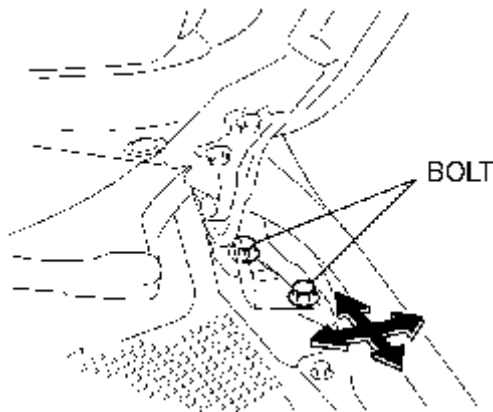

4. Tighten the bolts.
5. Verify that the gap between the hood and the body is within the specification.