




**GENUINE ACCESSORIES**  
**INSTALLATION INSTRUCTIONS**

**PART NUMBER**  
GRMS-88-K09  
0000-88-K10  
0000-88-K14

**B-PILLAR APPLIQUÉ**

**APPLICABLE MODEL:**

**2004 > RX8**

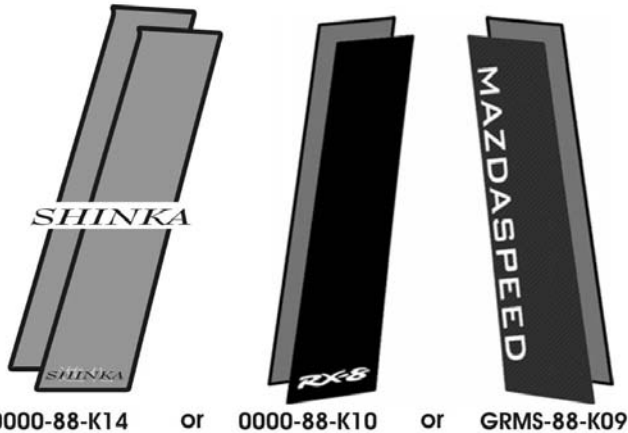

**Tools Required**



Lint Free Rag



50/50 Water / Isopropyl Alcohol

**0 Before Installation**



- Read entire installation instructions before beginning.
- Clean applicable area before installation.
- Note: The vehicle must be at room temperature.
- Dry fit appliqué to familiarize yourself with the proper fit and alignment of the parts

**1 Prep the B-Pillar**

- Locate the surface of the vehicle the appliqué will be applied to.
- Apply 50/50 Isopropyl Alcohol to a lint free rag, and then clean the surface of the vehicle B-Pillars with the lint free rag in small, clockwise or counter-clockwise circular motions.

**2 Align and Place Appliqué**

- Spray a fine layer of the 50 / 50 mixture on the installation area.
- Carefully remove Mylar backing.
- Align the upper corner radius of the part with the vehicle radius at the rear of the window. See Figure 1.
- Align the edges of the appliqué to the edges of the B-Pillar. If edges are not parallel or if in wrong position, remove and re-position.
- Verify alignment of appliqué in all directions. In side to side direction part should be centered on B-Pillar. See Figure 2.

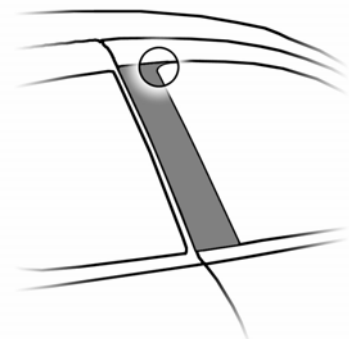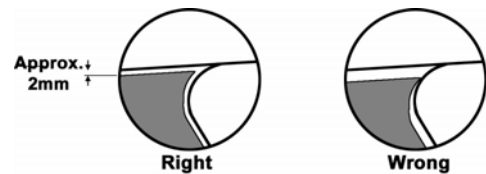

**Figure 1**

### 3

## Securing and Cleaning Appliqué

- a. Starting at the center apply firm yet equal pressure to fully secure the appliqué and force and trapped air to escape.  
**Note: Excessive pressure will indent urethane, avoid unequal pressure by using the palm of your hands to fully seat appliqué.**
- b. Using a lint free rag and 50/50 mixture, remove any hand prints from appliqué by rubbing in a circular motion. **Note: spray alcohol onto rag not directly on appliqué.**
- c. Repeat above procedure for driver side.

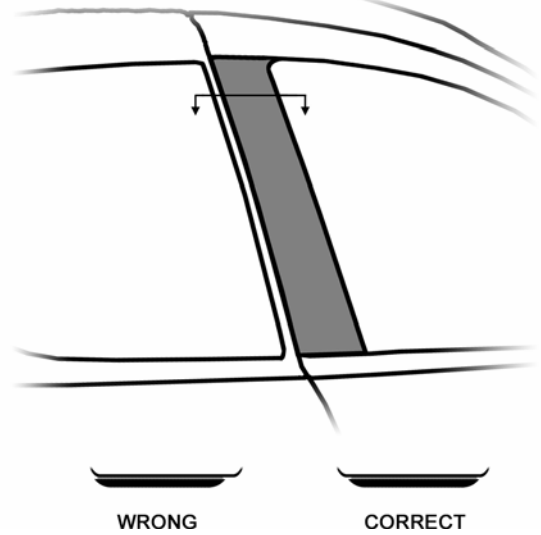


Figure 2